

assembly instructions

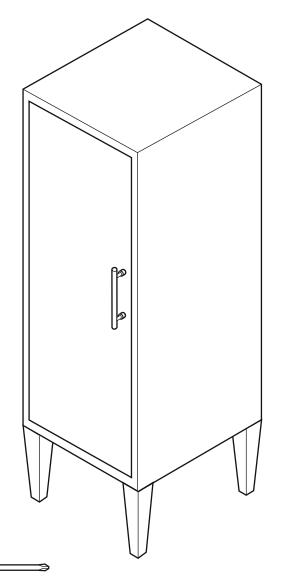


- ! Tools required: (
- ! Do not throw away packaging materials until assembly is complete.
- ! Assemble this item on a soft surface, such as cardboard or carpet, to protect the finish.

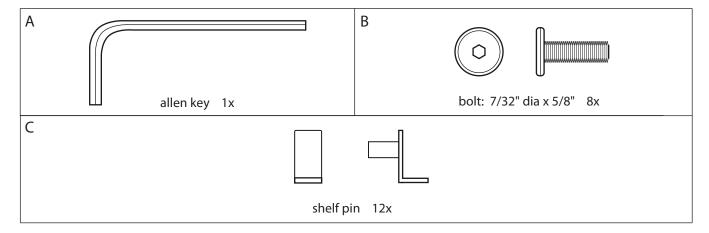

7206964/7206956 - 09/05 page 1 of 7

assembly instructions

1. Carefully turn piece on its back. To attach legs, insert bolt (B) through hole in leg and into base as shown. Tighten with allen key (A).

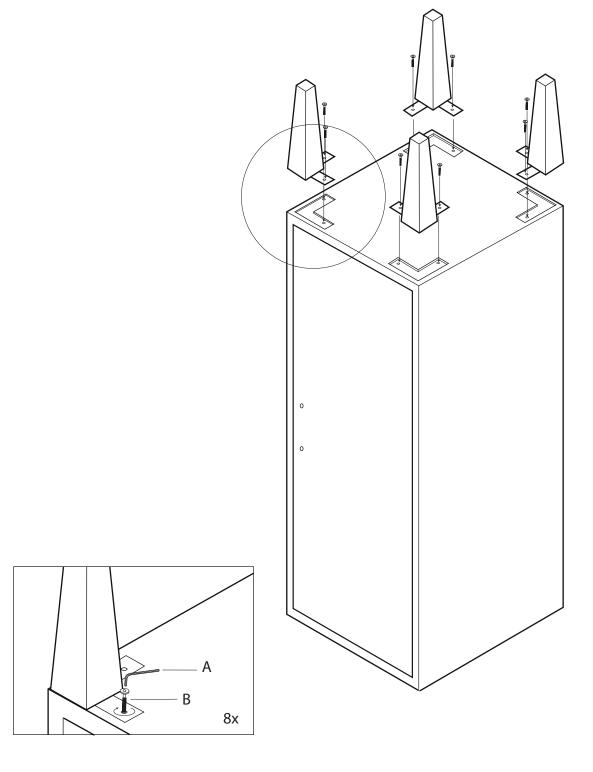


7206964/7206956 - 09/05 page 2 of 7

### assembly instructions


2. Detach the handle from the inside of the door using a Philips head screw driver. To re-attach the handle on the outside of the door, insert screw into pre-drilled hole and into back side of handle as shown. Tighten with Philips head screwdriver.

3. [OPTIONAL] If you would like to use the clothes bar in the wardrobe, place the bar in the supports located on the side panels on either side of the wardrobe.

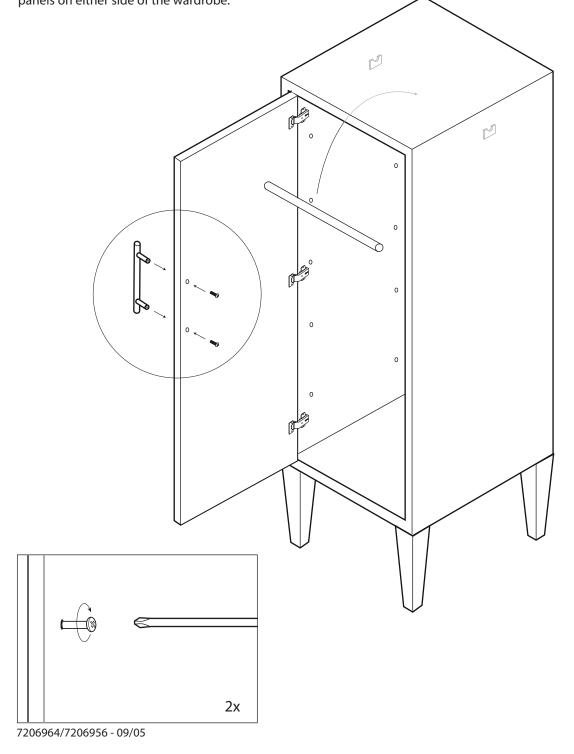

### assembly instructions


4. [OPTIONAL] If you would like to use the shelves in the wardrobe, insert shelf pins (C) into pre-drilled holes on side panels. Place shelf on top of shelf pins.

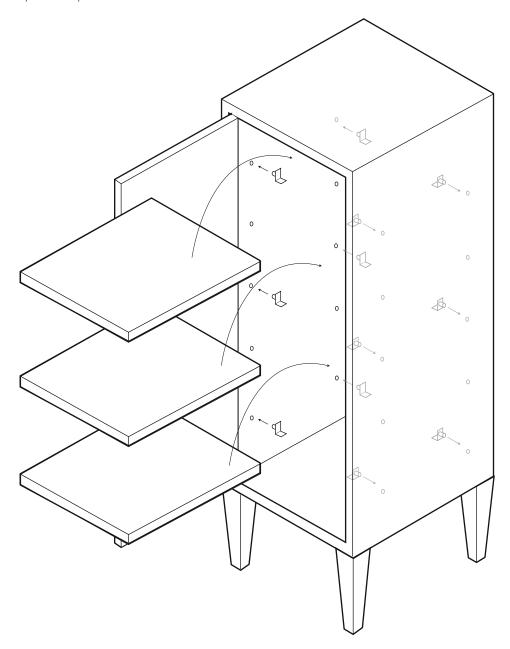



7206964/7206956 - 09/05 page 4 of 7

#### assembly instructions

5. [OPTIONAL] If you would prefer to have the wardrobe door open in the opposite direction, first detach the three hinges as shown, rotate the door length-wise, then re-attach on the opposite vertical panel of the wardrobe by inserting screws into pre-drilled holes as shown. Tighten using screwdirver.

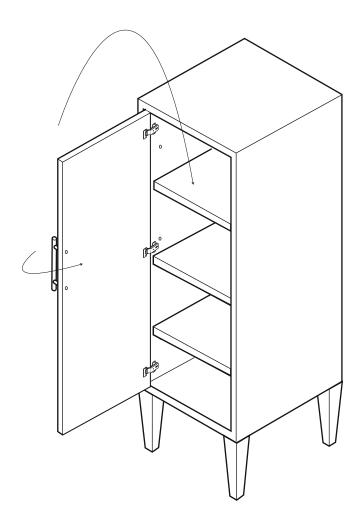

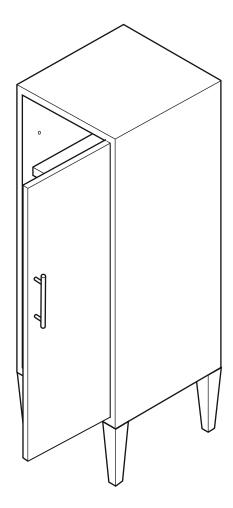

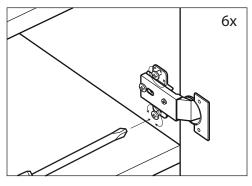

#### **CARE INSTRUCTION**

Hardware may loosen over time. Periodically check that all connections are tight.

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.


7206964/7206956 - 09/05 page 5 of 7

#### assembly instructions

Hinges are adjustable. In many cases, a combination of these adjustments will be necessary to level the doors.


For SIDE adjustment (adjusting the gap between door and cabinet):

- 1. Loosen screw A.
- 2. Adjust gap by turning screw B.
- 3. Re-tighten screw A.

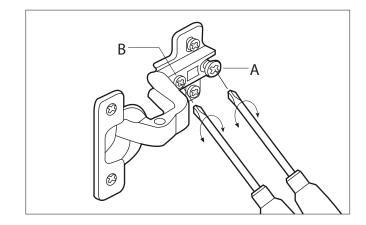


For HEIGHT adjustment (aligning doors level with top and bottom of cabinet):

- 1. Loosen screws C.
- 2. Adjust door to desired position.
- 3. Re-tighten screws C.

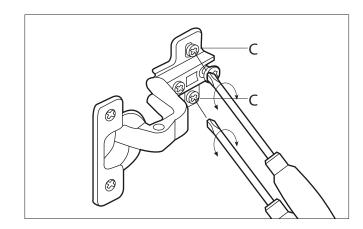

For DEPTH adjustment (adjusting how close the door rests against cabinet):

- 1. Loosen screw A.
- 2. Adjust depth.
- 3. Re-tighten screw A.

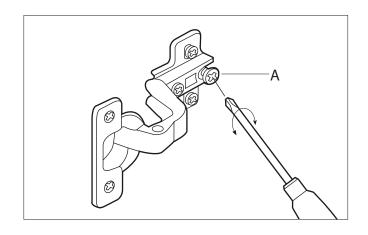


7206964/7206956 - 09/05 page 6 of 7

#### assembly instructions

OVER BALANCE. To prevent injury and property damage from unexpected tipping of furniture, we highly recommend installation of the two (2) sets of overbalance protection hardware included with this product.

- 1. Attach the two mounting brackets (I) horizontally to the top back edge of the furniture. Insert the short screws (III) through the holes in the bracket (I) and tighten securely using screwdriver.
- 2. Determine where the furniture is to be placed and mark location on the wall for the other two mounting bracket screw holes. It should be placed approximately 2" below the bracket mounted to the furniture.
- 3. Attach the two mounting brackets (I) vertically to the wall by inserting the long screws (IV) provided through the holes in the bracket and tightening securely using screwdriver.
- 4. Place the furniture so the brackets (I) on the back edge are in line with the brackets (I) on the wall.
- 5. Lace an end of the nylon restraint strap (II) down through each bracket (I). Bring both ends together and slide the thin end of the strap through the receiving end of the strap until snug.
- 6. Check to make sure the strap is securely laced and locked to the brackets.
- 7. Repeat steps 5 and 6 for the second bracket set.

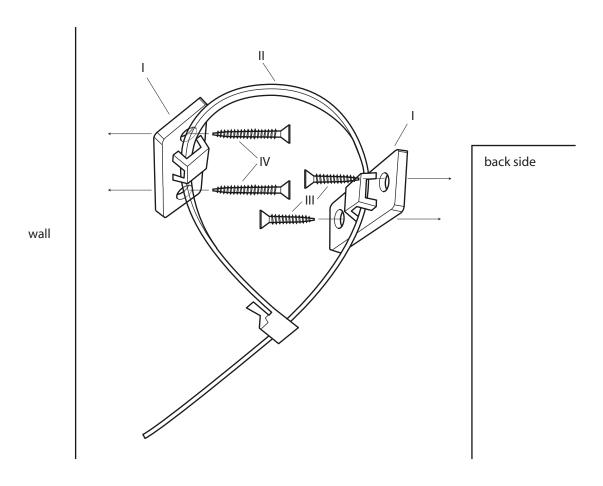

7206964/7206956 - 09/05 page 7 of 7