



west elm

curved upholstered dining chair

assembly instructions

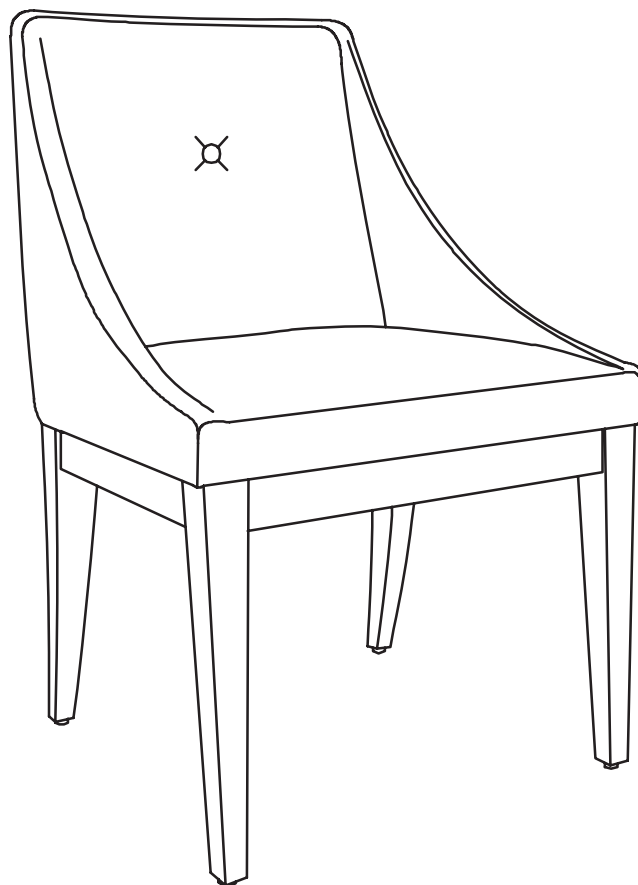

! Tools supplied:


! Do not throw away packaging materials until assembly is complete.

! Assemble this item on a soft surface, such as cardboard or carpet, to protect finish.

! Proper assembly of this item requires 2 people.

Hardware

A

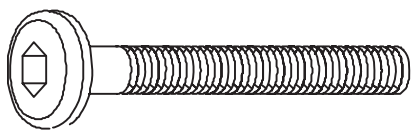


Bolt: 6mm x 60mm 8x

B



spring washer 8x

C

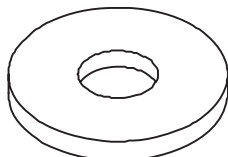


flat washer 8x

west elm

curved upholstered dining chair

assembly instructions

1. Flip chair seat upside down to attach the legs. Each leg is labeled for its location. Align the holes in the legs with the holes in the corner braces under the seat like the drawing shows. Insert bolts through spring washers and flat washers. Tighten with supplied allen key. Assembly complete.

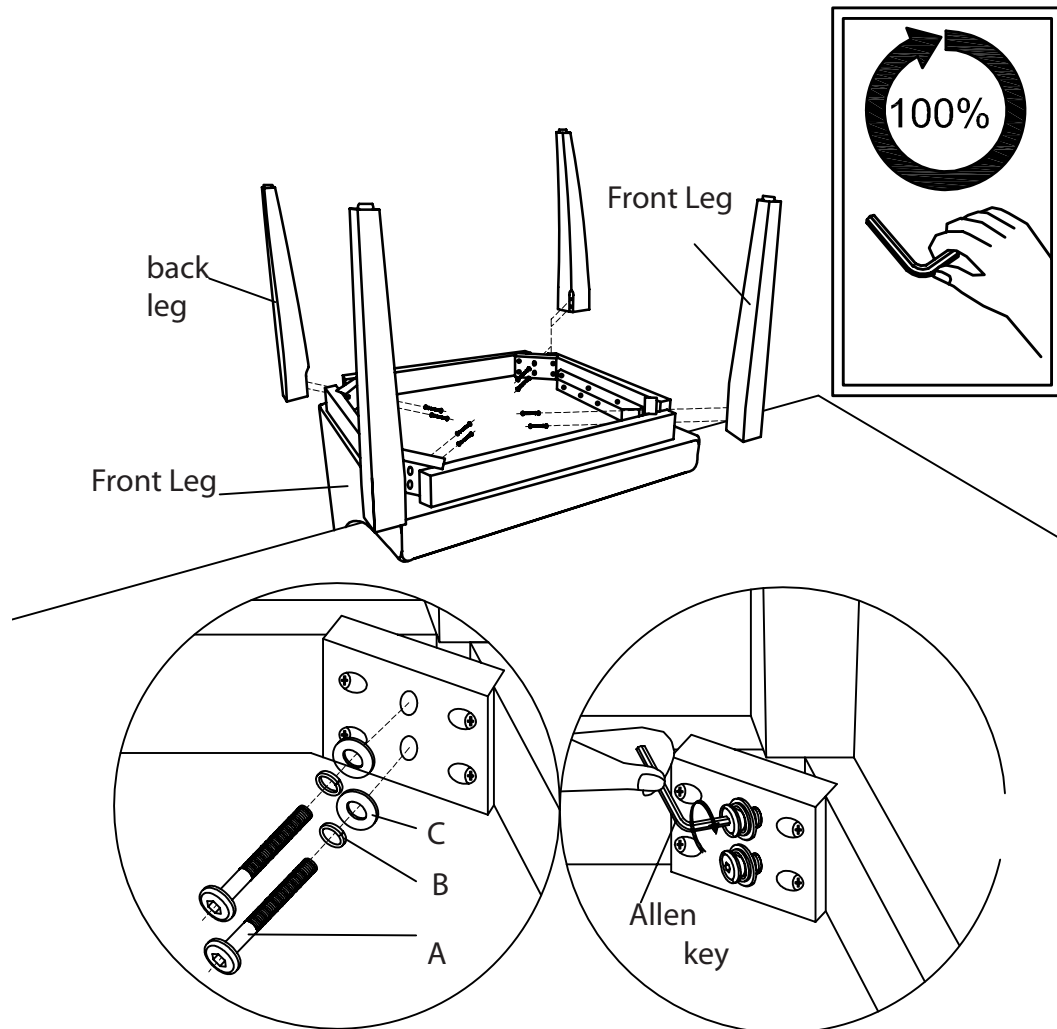

CARE INSTRUCTIONS

Hardware may loosen overtime. Periodically check that all connections are tight.
Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.
Upholstery: Spot clean only.