
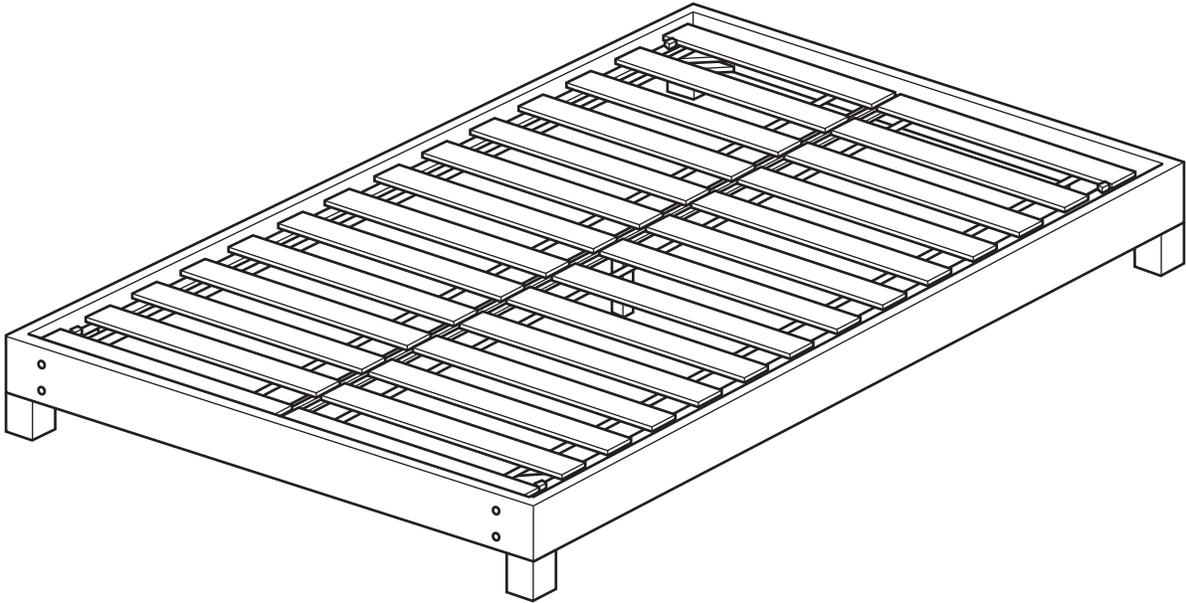


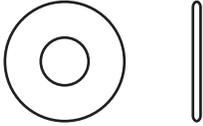


west elm : wood bed frame

assembly instructions




<p>A</p>  <p>bolt: 1/4"DIA x 1 3/4" 4x</p>	<p>B</p>  <p>bolt: 1/4"DIA x 2 1/2" 22x</p>
<p>C</p>  <p>metal washer 4x</p>	<p>D</p>  <p>lock washer 26x</p>
<p>E</p>  <p>screw: 5/16"DIA x 1 1/4" 4x</p>	<p>F</p>  <p>allen key 1x</p>

west elm : wood bed frame


assembly instructions

! Tools required:



! Do not throw away packaging materials until assembly is complete.



! Assemble this item on a soft surface, such as cardboard or carpet, to protect the finish.

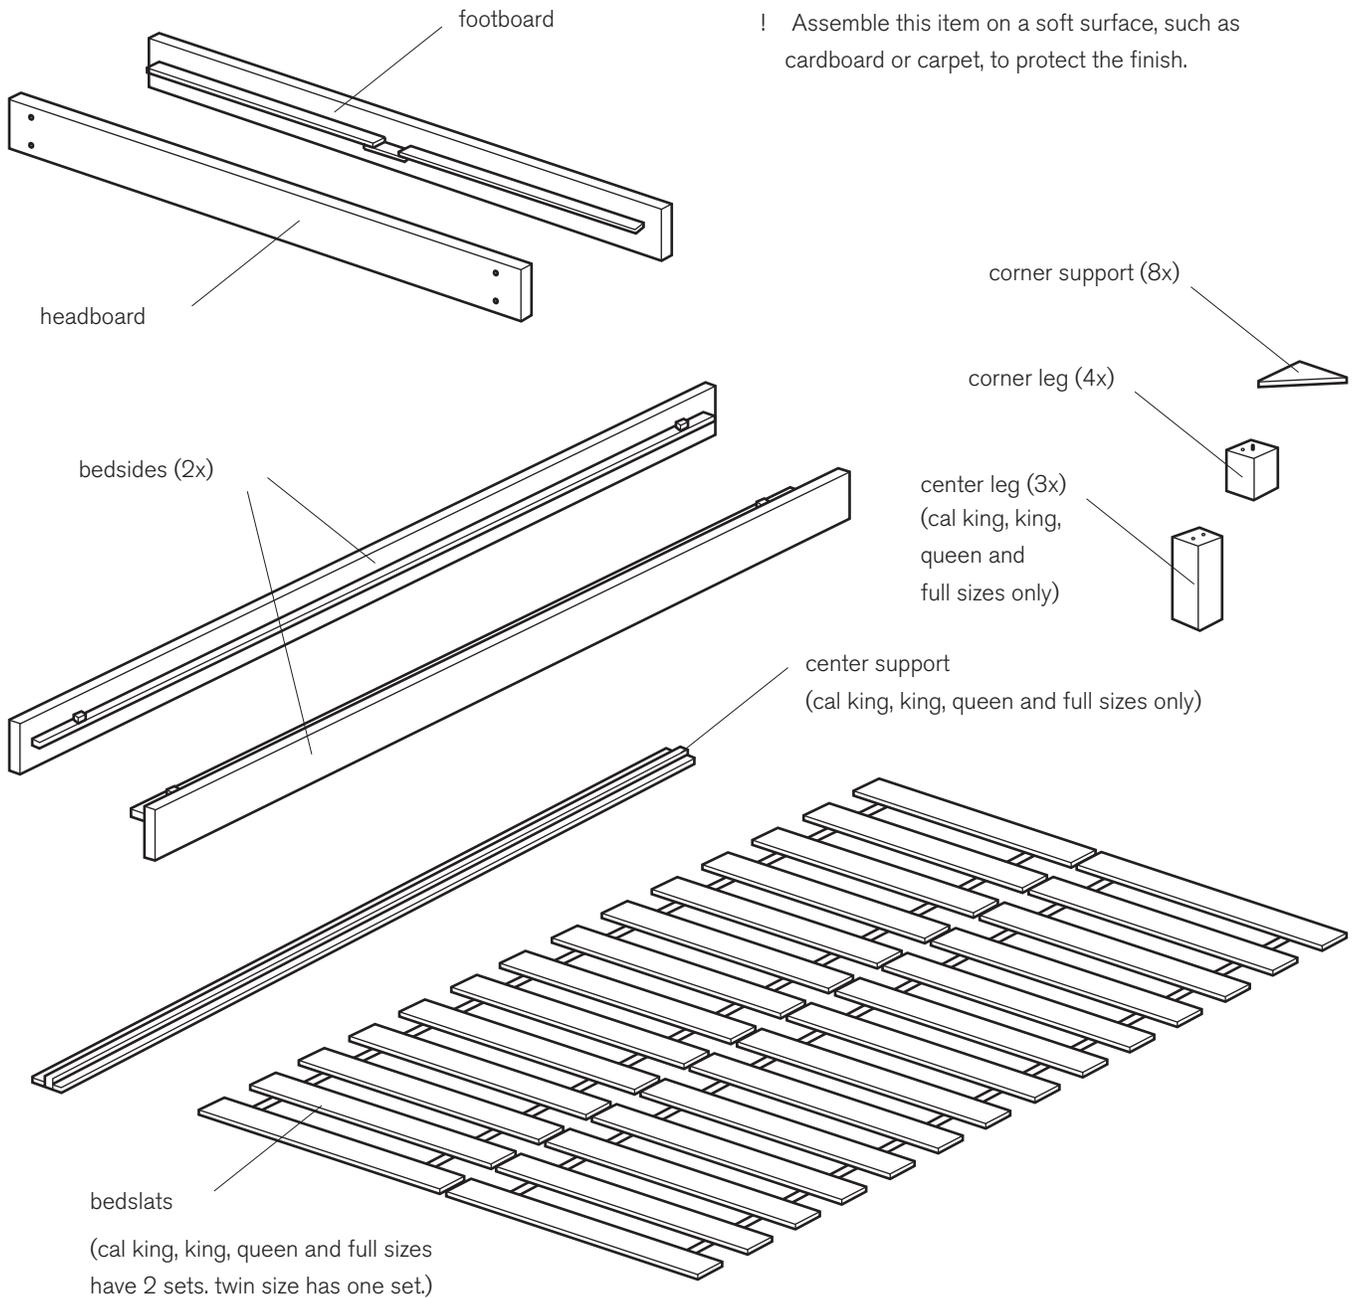

west elm : wood bed frame

assembly instructions



1. Attach corner support to the feet using bolt (A), lock washer (D) and metal washer (C). Align hardware as shown.

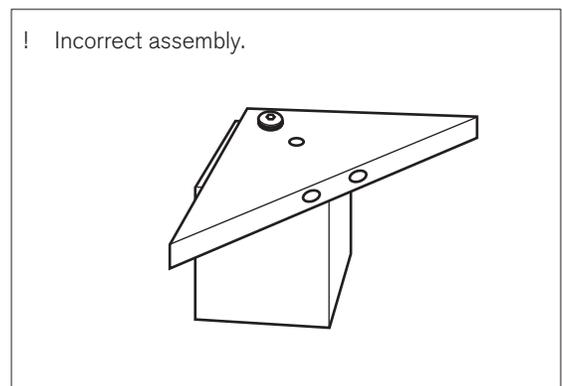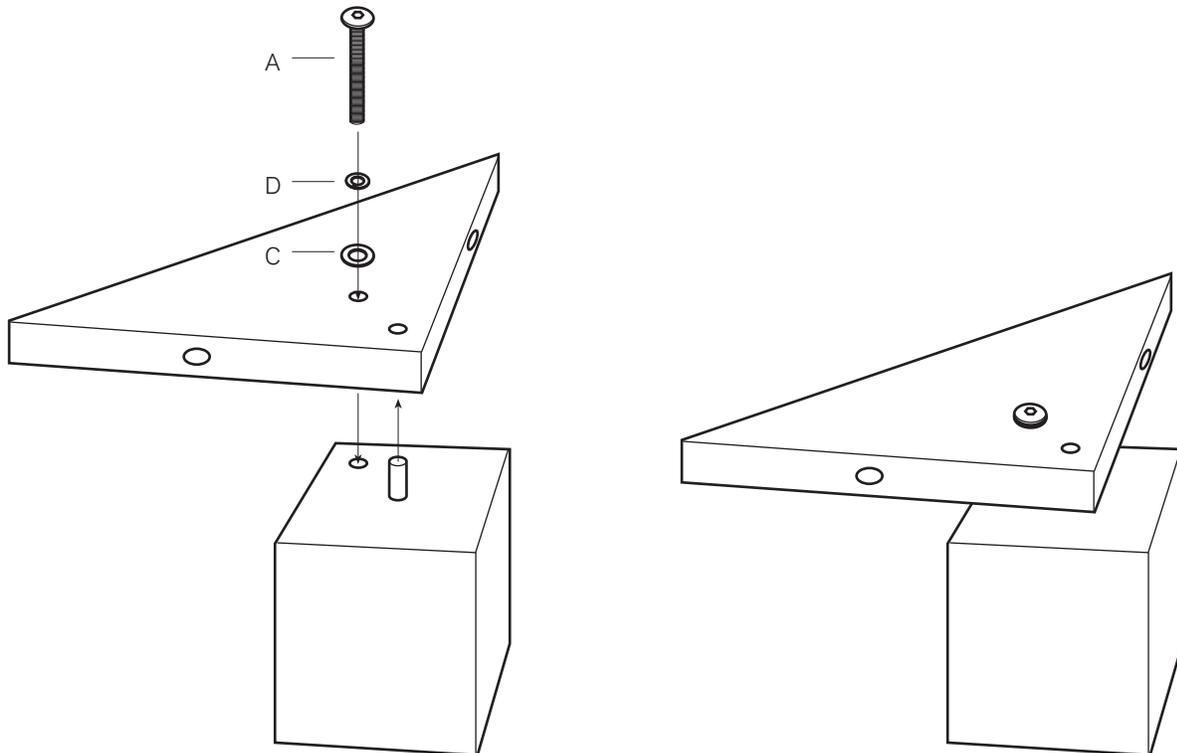

west elm : wood bed frame

assembly instructions



2. Insert the bed sides in the head and footboard as shown. The holes on the inside of the bedframe are to be positioned on the the top side.

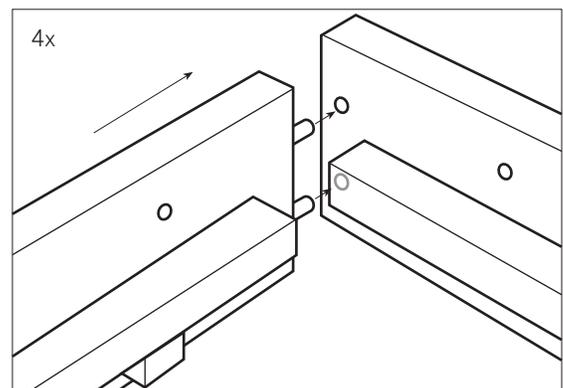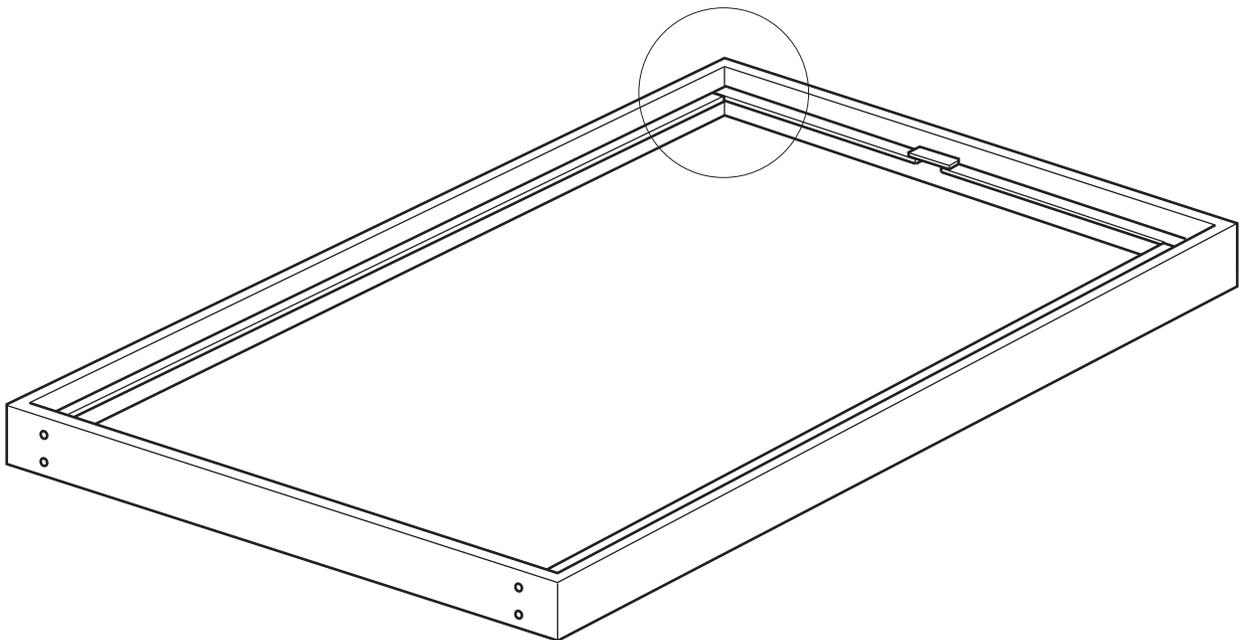

west elm : wood bed frame

assembly instructions



3. Attach corner supports with feet to bed frame using bolt (B) and lock washer (D).

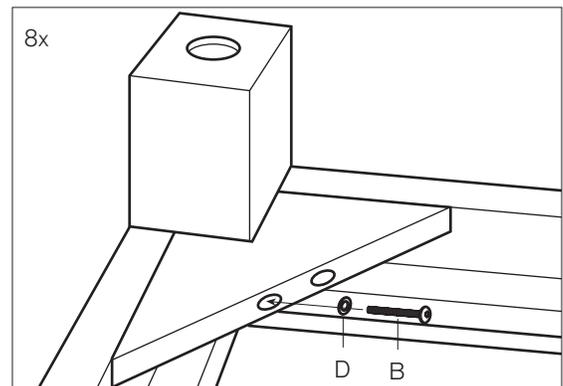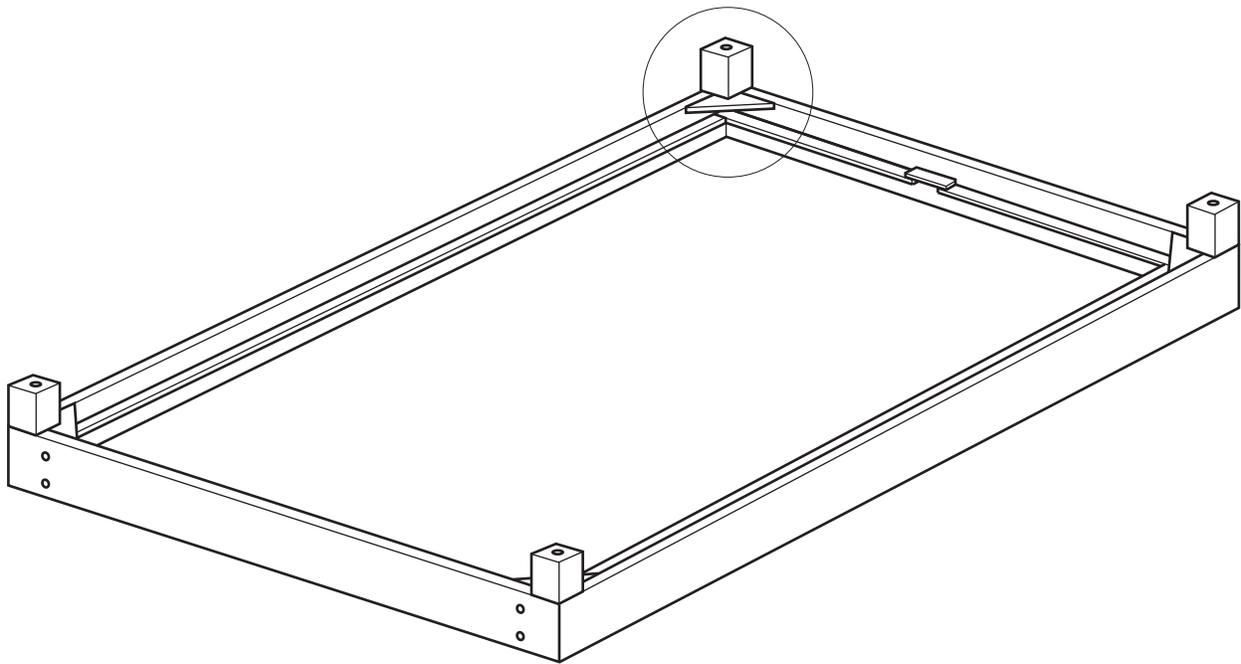

west elm : wood bed frame

assembly instructions

4. Turn the bed upright. Attach corner support to the footboard of the bed using bolt (B) and lock washers (D).

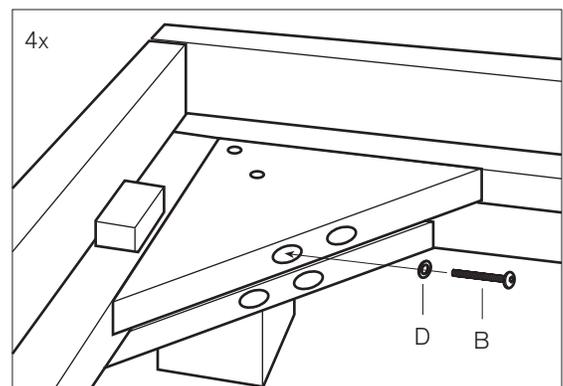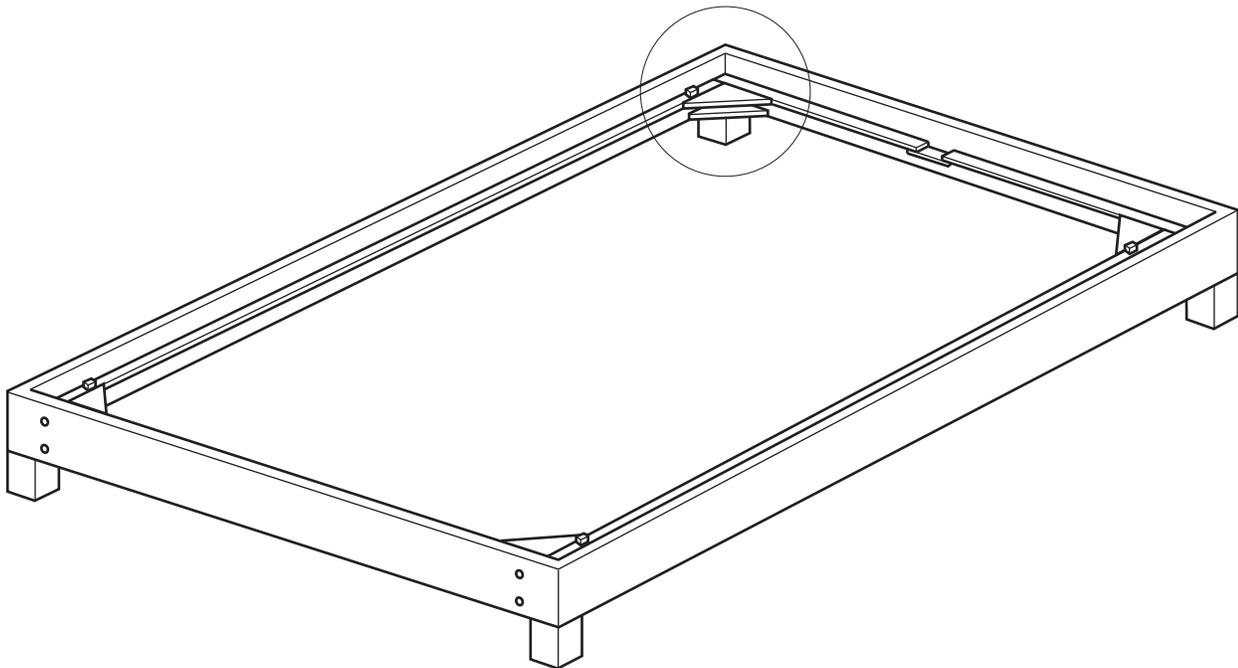

west elm : wood bed frame

assembly instructions



5. FOR BED FRAME WITH HEADBOARD:

Attach headboard now. Follow mounting instructions included with the headboard. Then move to Step 6.

FOR BED FRAME WITHOUT HEADBOARD:

Go directly to Step 6.

6. Attach two remaining corner supports to the bed frame using bolt (B) and lock washer (D).

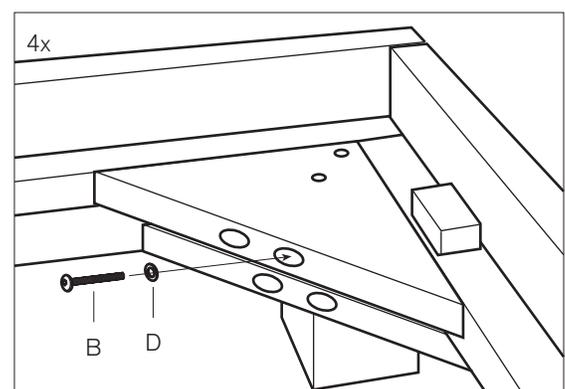
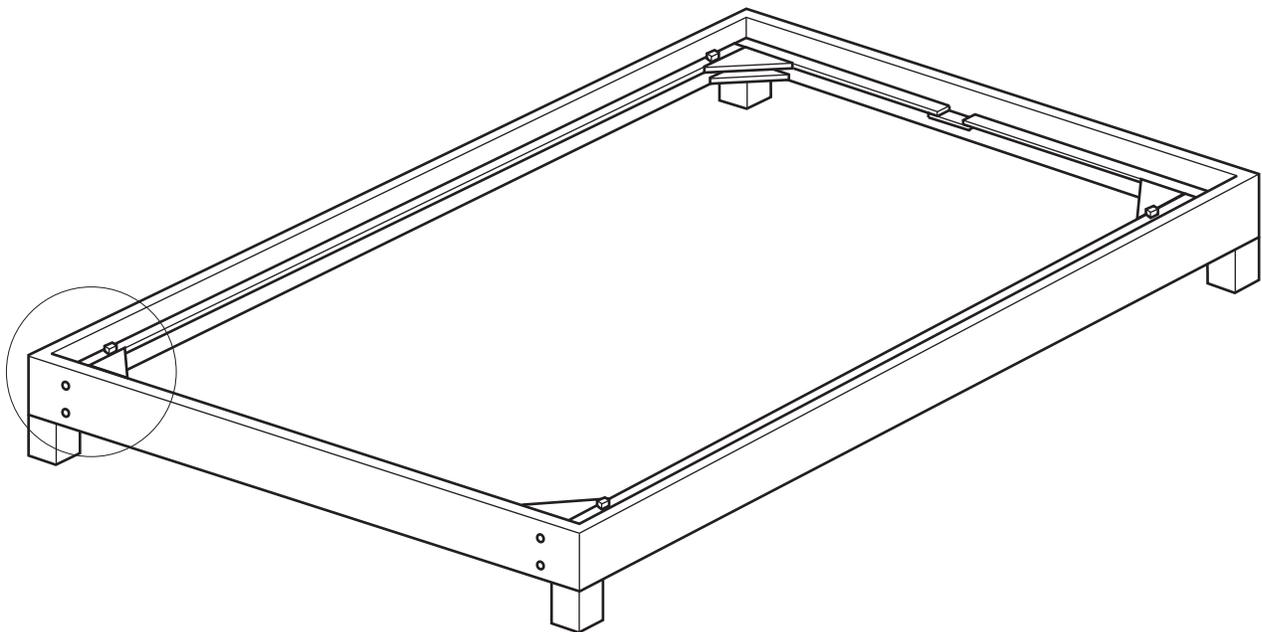


west elm : wooden bed frame

assembly instructions

7. FOR CAL KING, KING, QUEEN AND FULL BEDFRAMES ONLY:



Insert bolt (B) and lock washer (D) through pre-drilled holes in center support and into center legs as shown. Tighten with allen key (F).

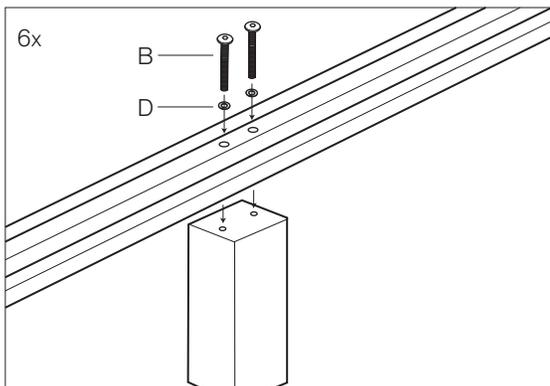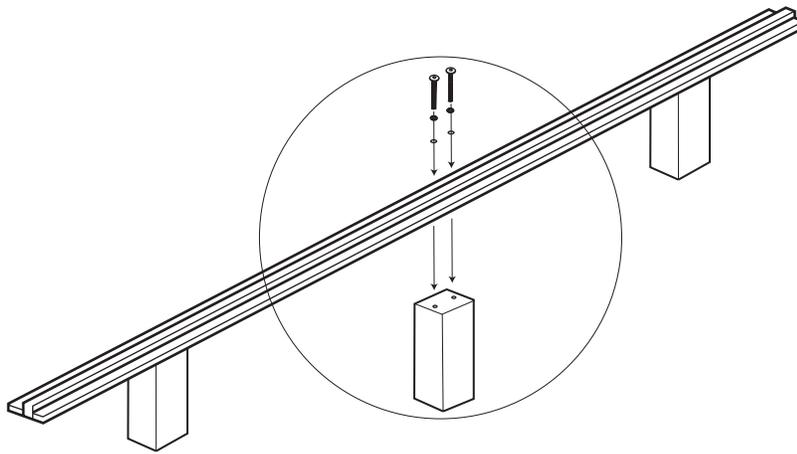

west elm : wooden bed frame

assembly instructions


8. FOR CAL KING, KING, QUEEN AND FULL BEDFRAMES ONLY:
Align center support in bedframe and attach with screws (E) as shown.

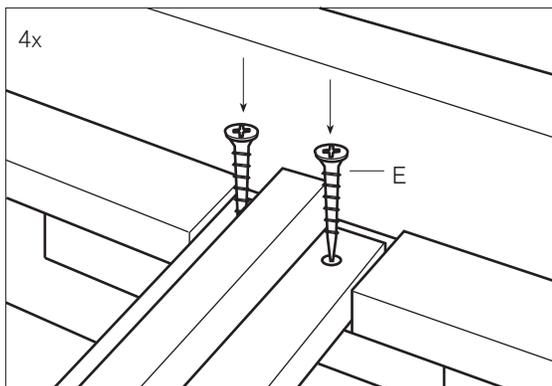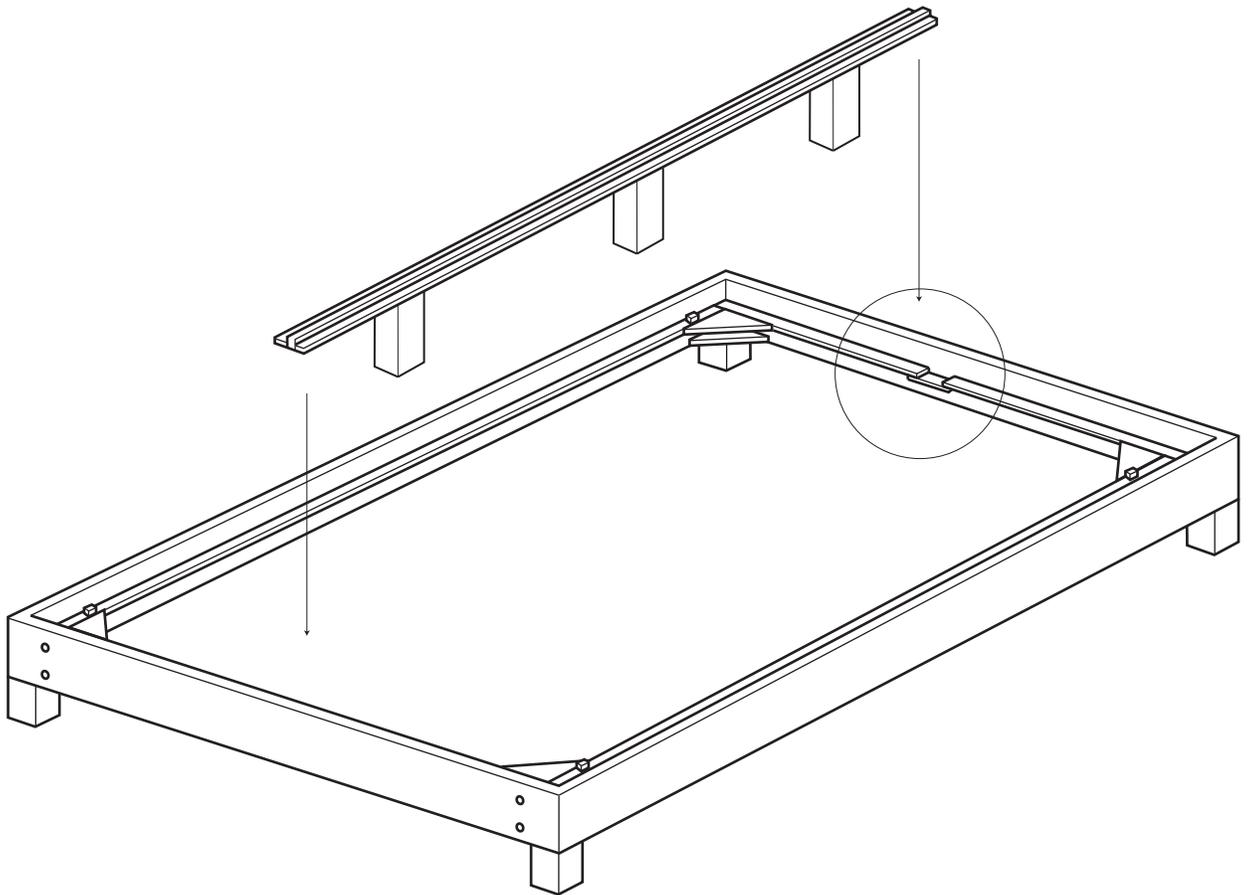

west elm : wooden bed frame

assembly instructions

8. Install slats. Position the bedslats as shown. There are stoppers attached at each end of the bed to prevent the bedslats from moving. If you are unable to fit the slats easily, we recommend that you unscrew the midbeam from the foot and headrail (as shown in step 7), set the slats in place, and rescrew the midbeam to the foot and headrail. The fit is tight to ensure that the slats are firmly in place.

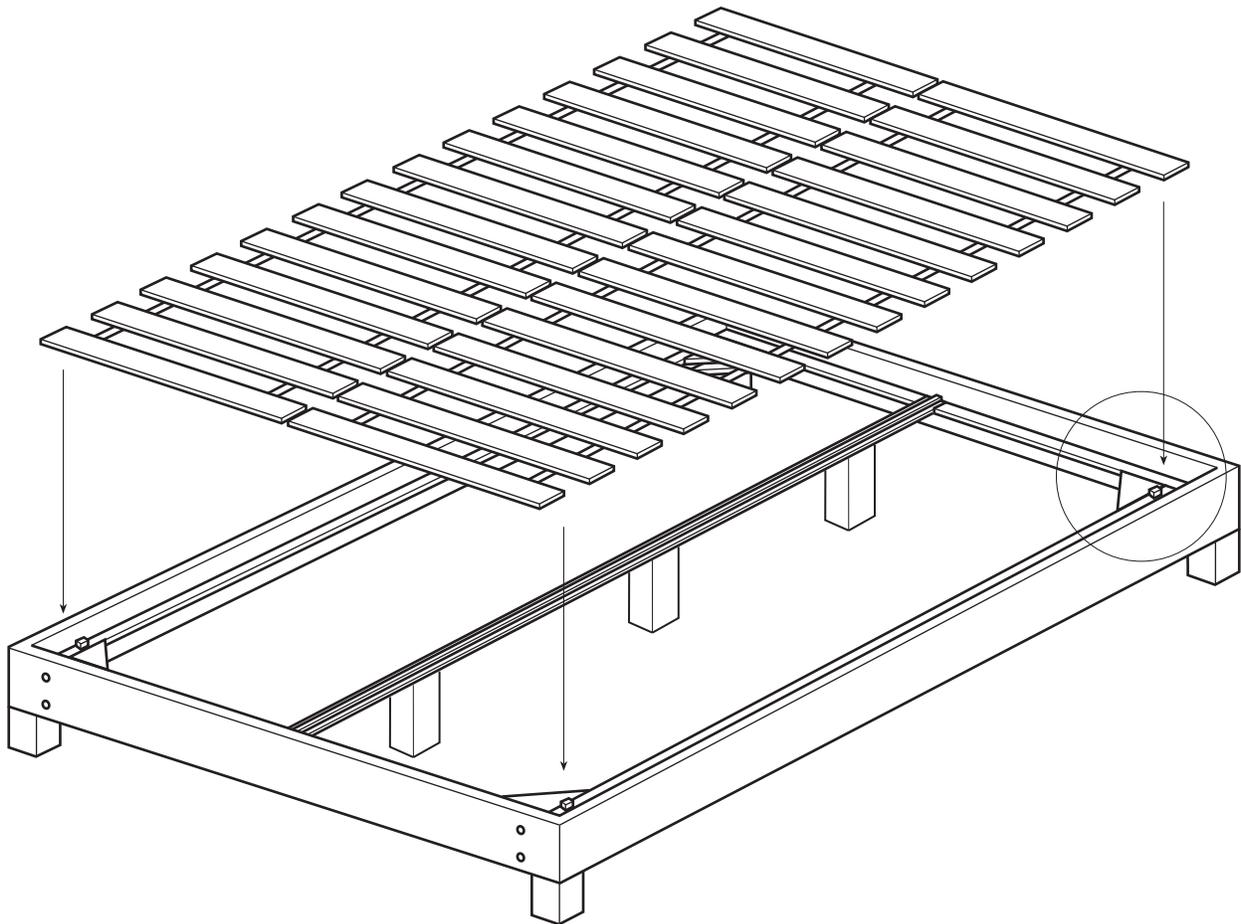

CARE INSTRUCTIONS.

Hardware may loosen over time. Periodically check that all connections are tight.

Wipe with a soft, dry cloth. To protect the finish, avoid the use of all chemicals and household cleaners.