
west elm

scoop back barstool


assembly instructions

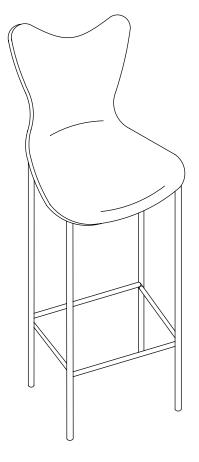

⚠ CAUTION

This product has been safely tested for a weight capacity of 250lbs. For your own safety, we recommend not to exceed this limit. Do not stand on chair.

- ! Do not throw away packaging materials until assembly is complete.
- ! Assemble this item on a soft surface, such as cardboard or carpet, to protect finish.

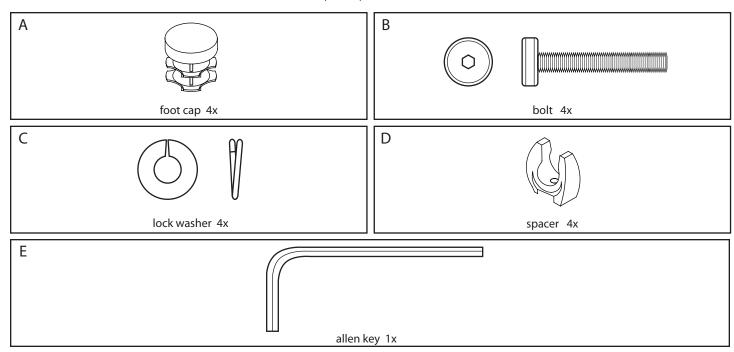

8433252/8433260 - 08/06 Page 1 of 2


west elm


scoop back barstool


assembly instructions

1. Fasten legs to chair seat using spacer (D), lock washer (C), and bolt (B) in order as shown. Be sure that the arrows on the legs face the front of the chair as indicated. Insert each bolt by hand first and then tighten all with allen key (E).

2. Insert foot caps (A) into legs.

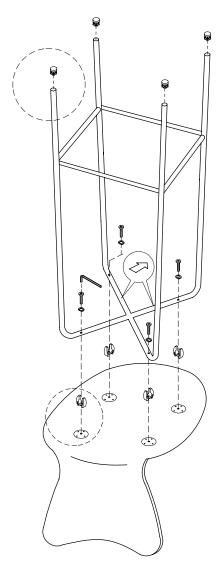

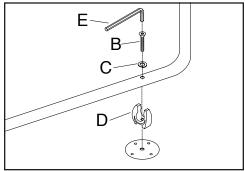

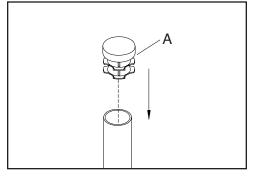

CARE INSTRUCTIONS

Hardware may loosen over time. Periodically check that all connections are tight.

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

8433252/8433260 - 08/06 Page 2 of 2