


NOTE:

- Use proper hardware for your wall type (such as anchors for drywall). When in doubt, consult your local hardware store. For your safety, installation by two people is recommended.
- Designed to be used for decorative items only.
- Wipe with a soft, dry cloth. To protect the finish, avoid the use of all chemicals and household cleaners.

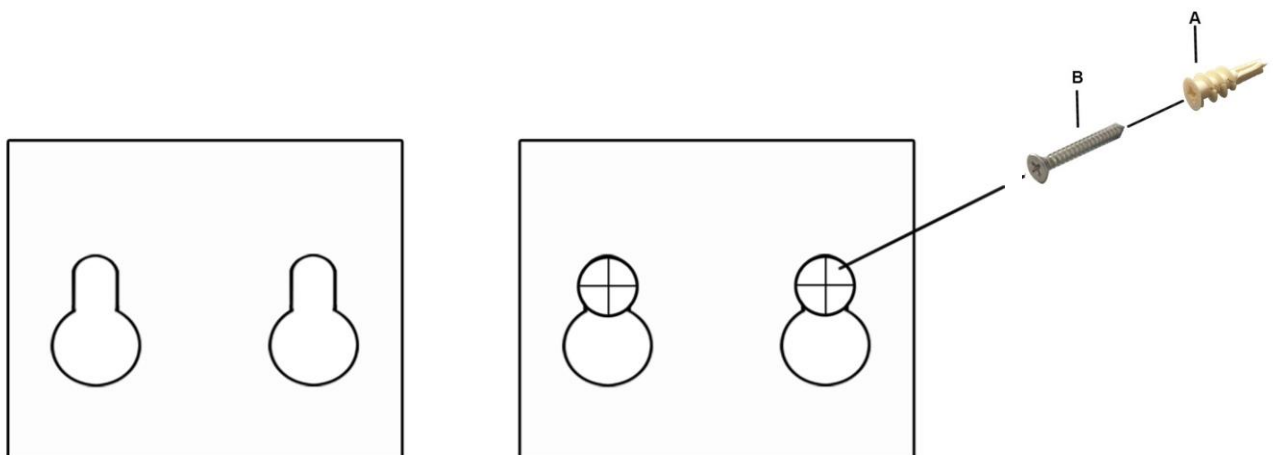

1. Hold pot at desired location.
2. Using a Philip's head screwdriver, insert the plastic drywall anchors (A) into the wall at the insertion points. Press and turn clockwise until anchors are flush with the wall.
3. Insert screws (B) into the anchors or at the insertion points, leaving approximately ½" between the back of the screw head and the wall.
4. Align pothole over the screw heads.
5. Hang the pot down until it rests on the screws. Tighten or loosen screws as needed to fit the pot against the wall.